



INSTALLATION INSTRUCTIONS

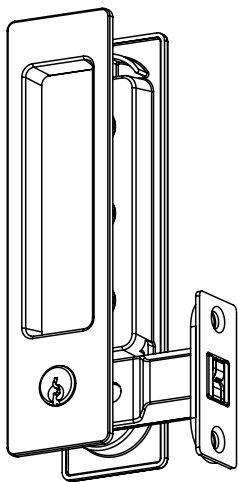

Entrance lock

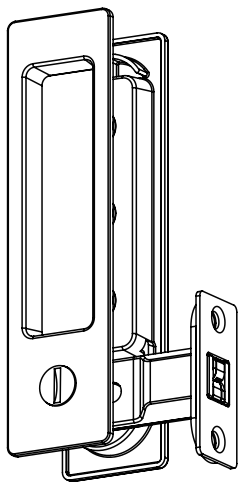

Sliding Door Lock

Privacy lock

Important:
This product is designed for cavity slider doors. Do not clean with chemicals.
Please read this manual carefully before installation and install in the correct way.

- 1. Drill the Hole:**
Select the correct installation position based on the thickness of the door.
Using the supplied template, drill the holes for the flush pulls, finger pull and latch according to the size and position shown.

2. Install the Latch:
Before installing the latch, make sure the hook is fully retracted.

3. Install the Escutcheons / Flush Pulls:
For entrance locks: Remove the key before installation.

1. Insert the tailpiece into the slot in the outside flush pull, as shown in the diagram.

2. Insert the outside flush pull into the prepared hole in the door.


3. Turn the tailpiece from the inside of the door and check that the latch operates smoothly.

4. Install the inside flush pull.

5. Turn the inside knob and make sure the tailpiece is correctly inserted into the knob slot.

6. Test the lock several times to make sure the latch and knob operate smoothly.

7. Once everything is working correctly, attach the decorative plate. The plate is held in place by magnets.

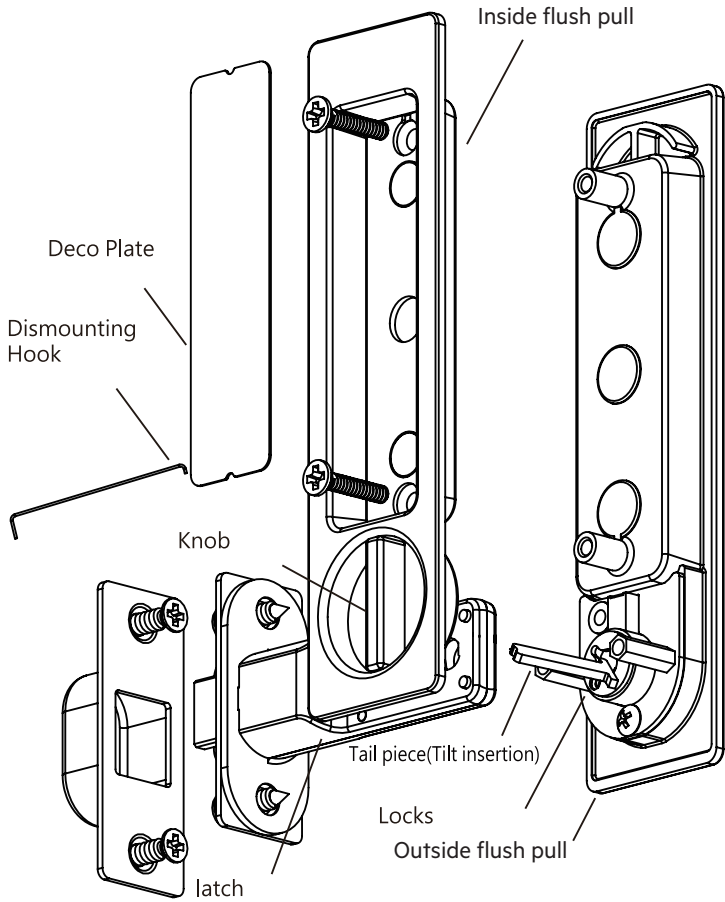

DOOR THICKNESS


Door thickness	Screw length	
31~35 mm		12 mm
35~40 mm		18 mm
40~45 mm		22 mm
45~55 mm		28 mm

D.T.35~41 E	
Entrance lock tail piece	
Door thickness	Tail piece length
33~38 mm	18 mm
38~45 mm	25 mm
44~51 mm	31 mm


Entrance lock 35-55MM
Privacy lock 31-51MM

D.T.31~36	
Privacy lock tail piece	
Door thickness	Tail piece length
31~37 mm	29 mm
37~44 mm	36 mm
44~51 mm	43 mm

Template Unit : mm

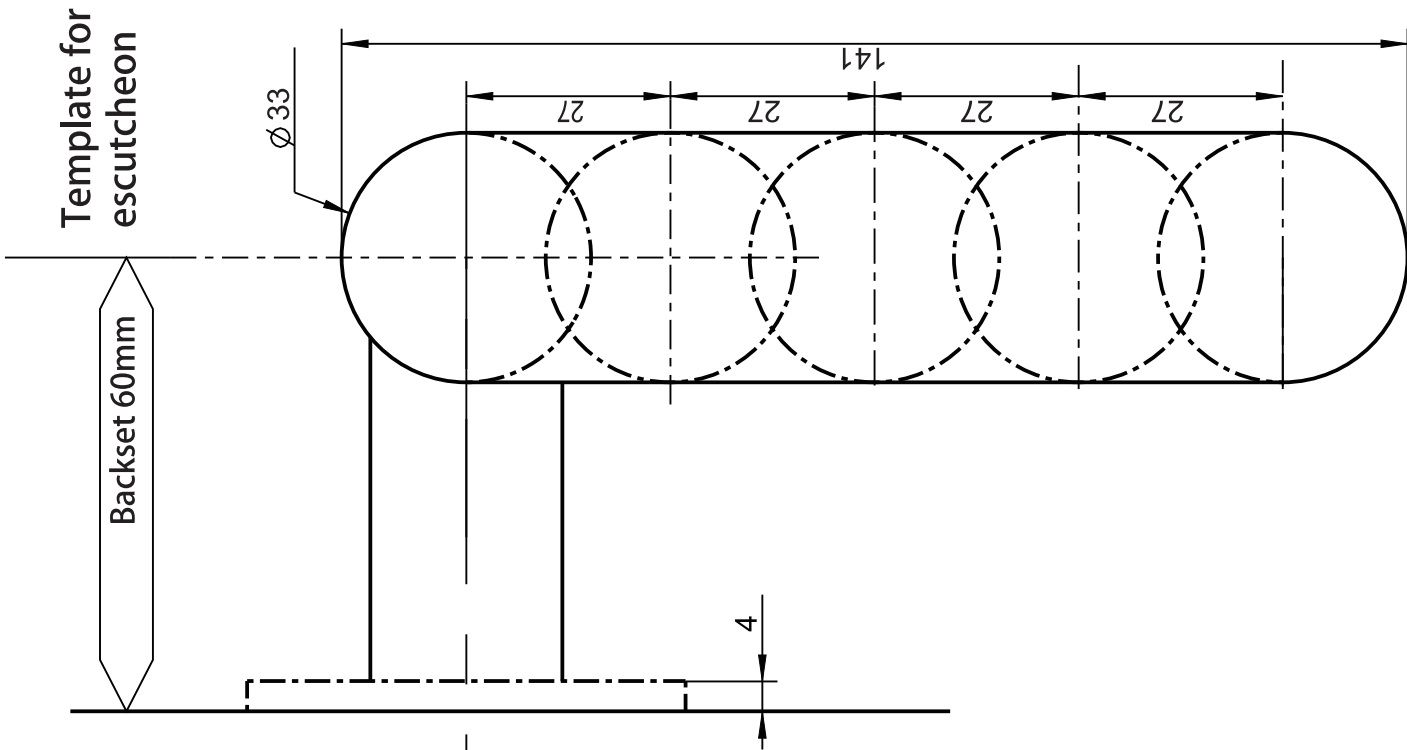

Template for latch

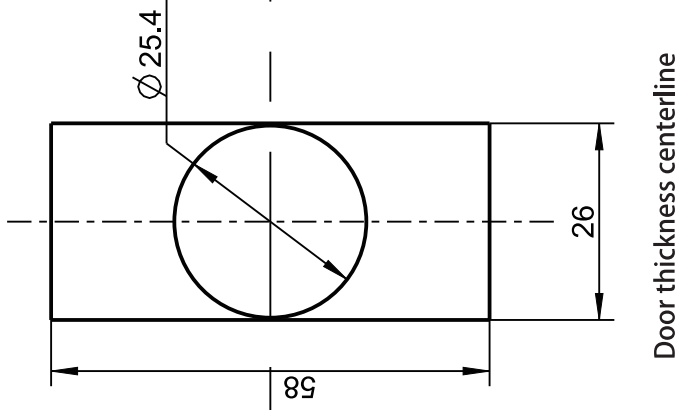

Template for strike

