

Installation Instruction-----Sliding Door Lock


Note:

1. Install the lock after the painting of the door and doorframe fully dried.
2. Don't use any hard object to scrap the surface of the lock .
3. Don't use any corrosive liquid to clean the lock, but shine it with soft cloth.
4. The lock is suitable for the door thickness ranged from 38mm to 50mm.
5. The direction of opening door: It's right-sliding door lock when the lock strike is in right, or it's left- sliding door lock.

Function:

This lock is specialized in using in interior left-sliding or right-sliding door. Don't use in the exterior application.

Sketch of installation:

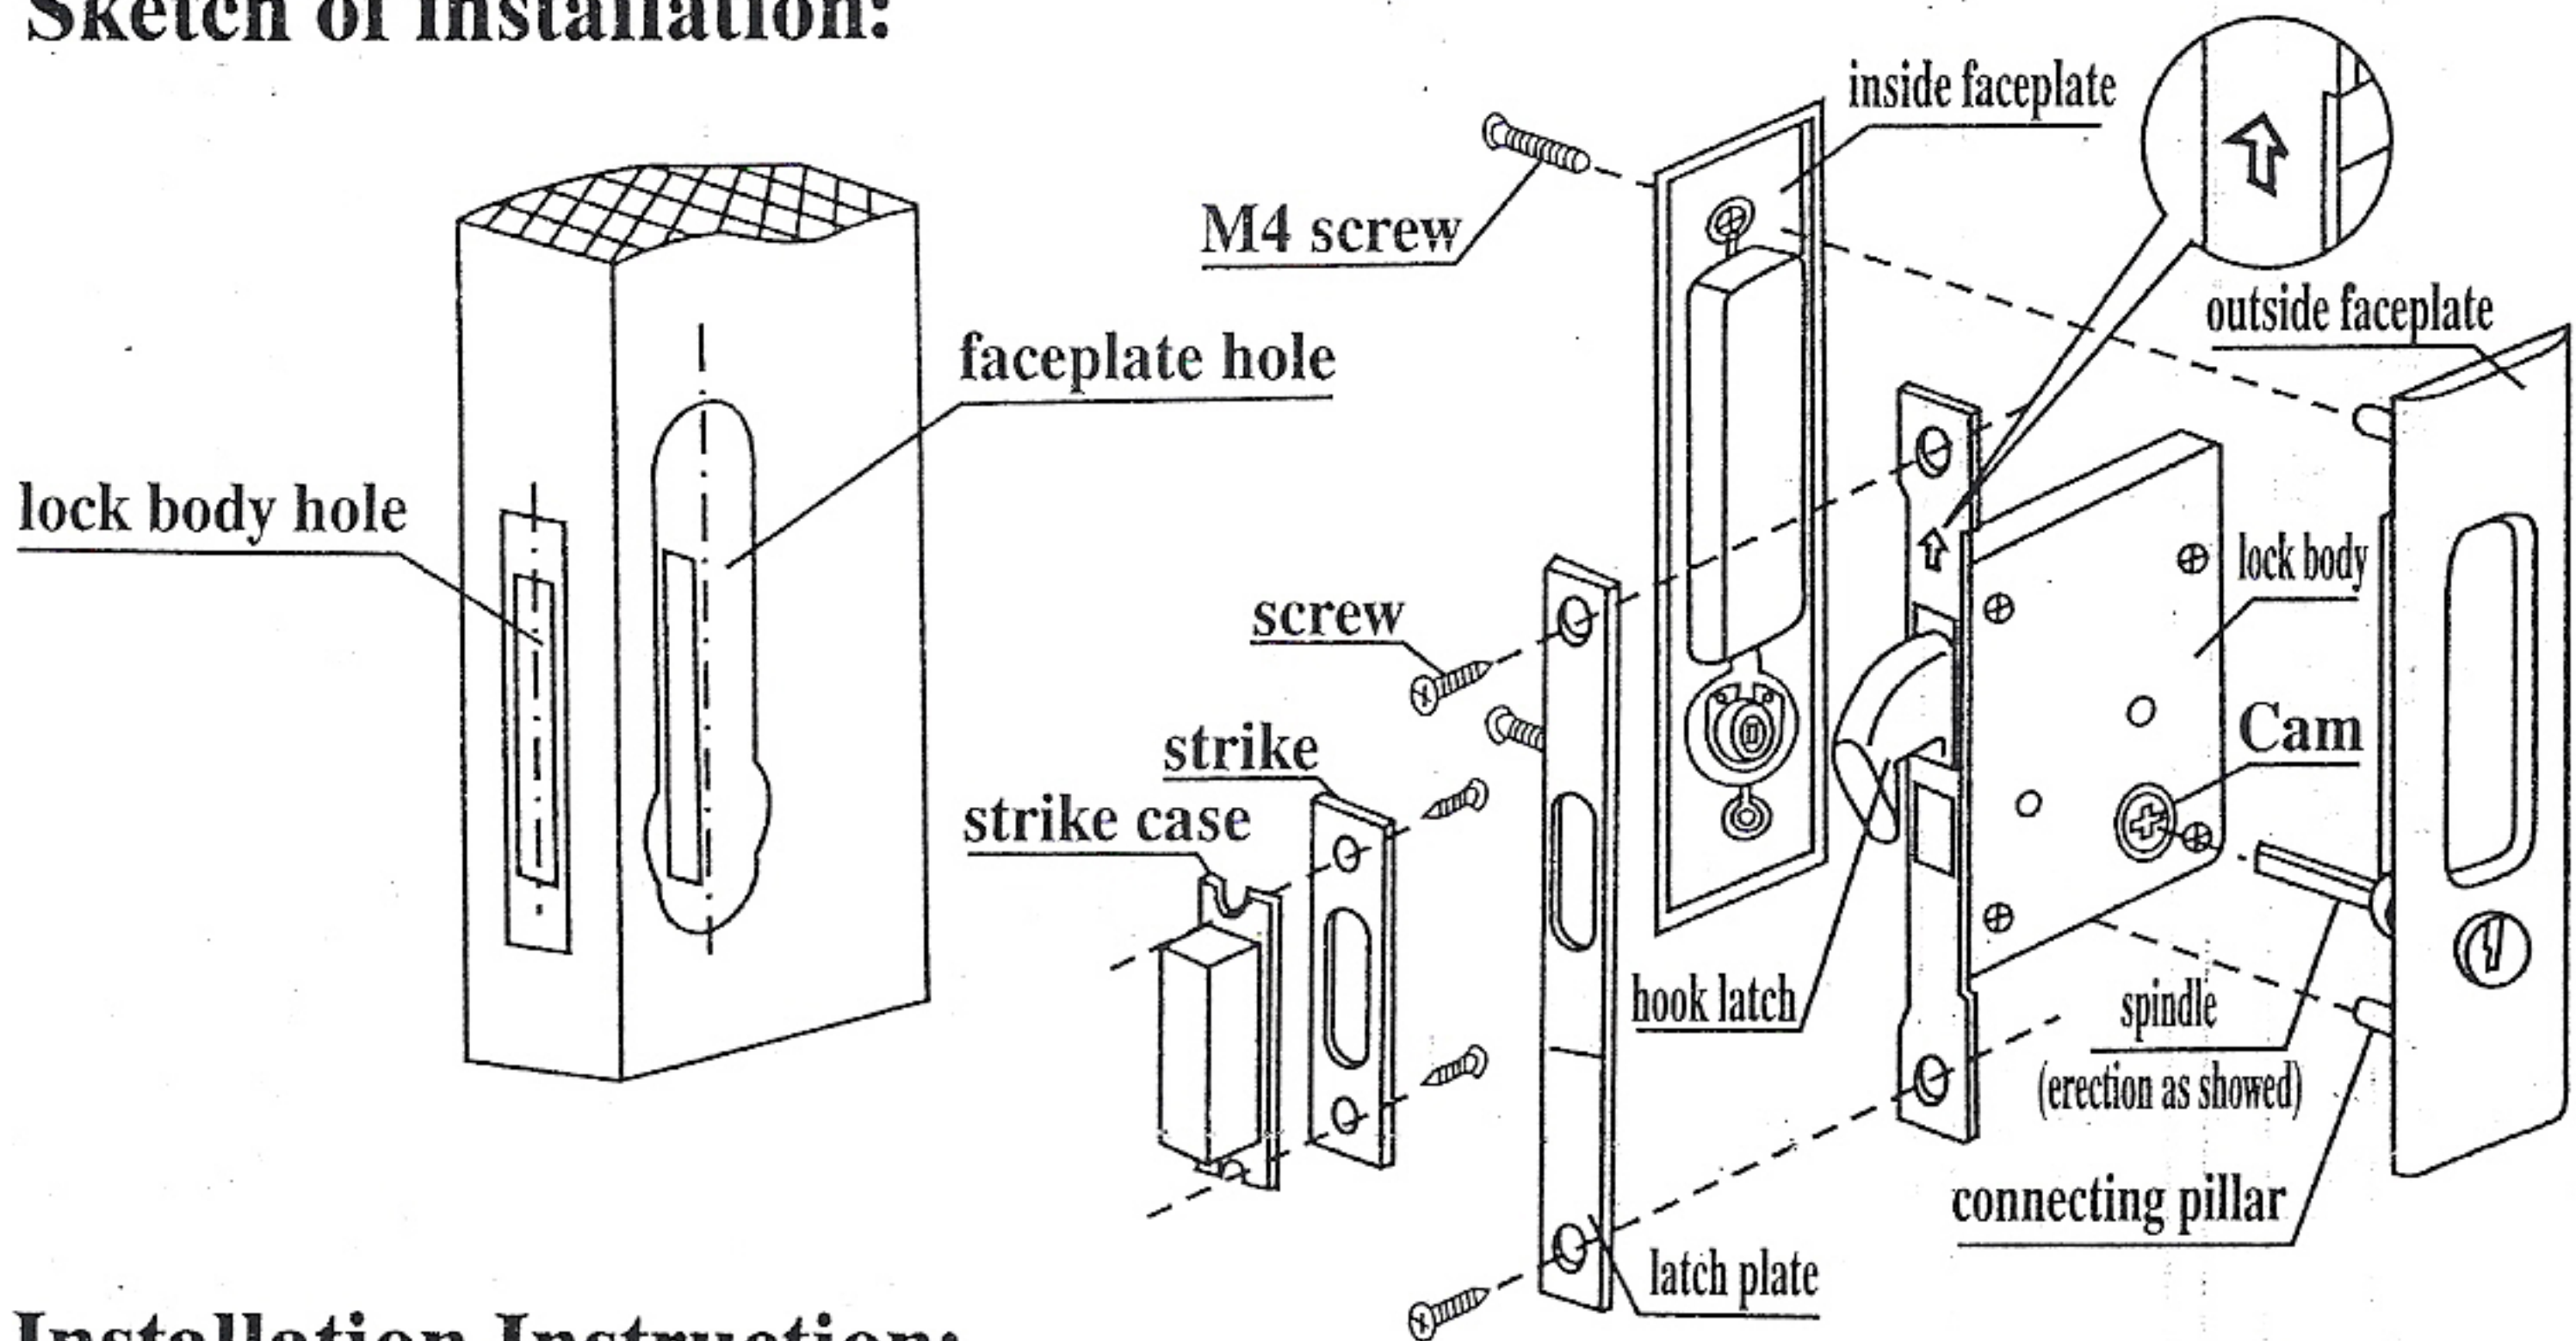

Installation Instruction:

1. Mark a horizontal line on suitable height and cut down the lock body marker.
2. Put the door edge line and horizontal line of faceplate marker to point at the door and mark the anchor points, then bore holes accordingly.
3. Put the horizontal line of lock body to point at the door, then drill a lock case hole with 12mm in width, 85mm in height, 65mm in depth at the center of door thickness to put in the lock body as per the lock body marker. (Clean away the sawdust of the hole being putted into the lock body).
4. Then drill one more hole with 16mm in width, 130mm in height, 2.8mm in depth at the center of lock body hole to make the surface of faceplate and door side flatly.
5. Put the lock body into the hole with the arrow upward, and put on the latch plate and make its hole to point at hook latch, then tighten the latch plate with two screws provided. Make sure the hook latch used smoothly.
6. Put the spindle of faceplate horizontally (left-sliding door) or erectly (right-sliding door) through the cross hole of the lock body. Then fix the outside and inside faceplates accordingly and fasten both faceplates with two M4 screws. If the screws or spindle too long, cut a little properly.
7. Install the strike and strike case: Make sure the up and down position of the strike case (there is a "up" word for the upwards). Open a strike hole (80mm *24mm *2mm) and a strike case hole (41mm *15mm *17mm) in the door frame according to the position of hook latch, then put in the strike and strike case and tighten with screws. Finally, make sure the hook latch work normally.
8. Check all parts, tighten all screws if they work well.