

Window Restrictor Stay Installation Instructions


10 YEAR WARRANTY

1


SAFETY AND SECURITY

For safety and security we recommend that two stays be fitted to each window for best resistance to forced entry.

NB: there is wide variation of aluminium window types incorporating differing shapes and thicknesses of aluminium material.

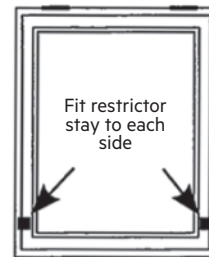

Awning Windows

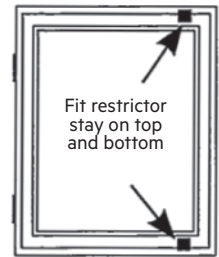

Casement Windows

2


DETERMINE IF PACKERS ARE REQUIRED

- Hold the window restrictor in position on the window.
- Check if the window restrictor will clear the window upstands on both the window sash and window frame.

NB: Packers are supplied if required for when the window restrictor arms make contact with any part of the window sash and/or frame.

Fitting to window


NB: Fit the window restrictor as low as possible on the window to ensure window opening is restricted to 100mm. For accuracy and to make drilling easier we recommend centre punching each screw/rievet hole prior to drilling.

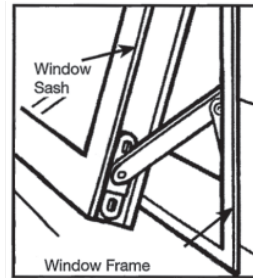

3

WINDOW RESTRICTOR POSITIONING


- Select fixing position for window plate as close to base and as far forward as practical.
- Mark hole positions on window frame and drill two holes.
- To ensure screws will clear glass line avoiding damage to the glass during fixing, insert small diameter nail to establish if there is sufficient clearance between screw and glass.
- Fix window plate in position with 8mm long screws. Use the 12.5mm long screws if the packers are being used.

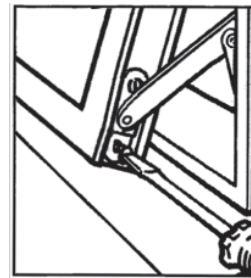

4

FITTING FRAME PLATE

- Mark the position for frame plate at the same height as for window plate.
- Mark hole positions and drill two 2.5mm diameter holes and fix frame plate in position with the 25mm long screws whether packers are being used or not.

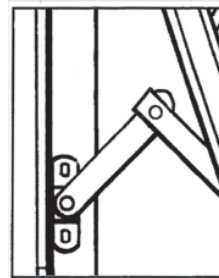

5

FITTING WINDOW RESTRICTOR TO OTHER SIDE OF WINDOW

Follow steps 1-4 to install the window restrictor on the other side of the window.

NB: Fit at the same height as the first one.

IMPORTANT

Window restrictors can be fitted to all windows in your home. However we recommend not fitting window restrictors to one window in each room to allow exit in emergencies.

CASEMENT WINDOWS

Installing window restrictors.

- Follow instructions as per awning windows but fit at top and bottom of windows on the opposite side to the window hinges.

