



INSTALLATION INSTRUCTIONS DEADBOLT LOCKSET

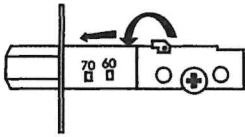


Your Latch is factory set for 2-3/8" (60mm)
 If your door requires a 2-3/4"(70mm)Latch,
 follow these steps.
A. Hold Latch in your right hand so you can
 see adjustment holes. With left hand turn
 latchplate in clockwise position. pull latch
 plate out of sase as far as it will go.
B. Turn back and lock into 70mm position.

1. INSTALL THE LATCH

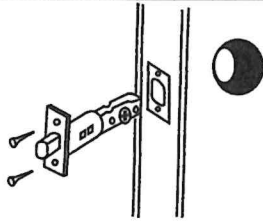


1. Install deadbolt latch in "up" position into door hole.
2. Insert and secure with wood screws.

2. INSTALL EXTERIOR ASSEMBLY

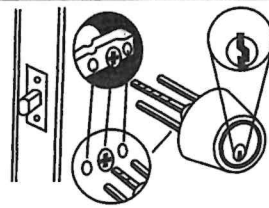

1. Place cylinder assembly through outside cylinder guard and on door making sure torque blade is properly positioned in latch crank.
 2. Put key in cylinder and turn until Deadbolt is exposed.
- Note: Keyhole must be in the "down" position as shown.


3. INSTALL INTERIOR ASSEMBLY

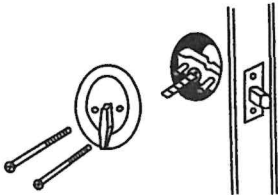

Make sure Deadbolt is in Locked position.
 Place thumb turn assembly onto torque blade and line
 up screw holes. The thumb knob will be in the "up"
 position so you can see the screwholes. Tighten long
 machine screws.


INSTRUCTIONS FOR INSTALLING DOUBLE CYLINDER DEADBOLTS

Install Exterior Cylinder

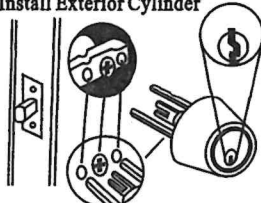

Press interior assembly flush against door making
 certain the torque blade is properly positioned in
 the latch hole. Key hole must be in down position.

Install Interior Cylinder

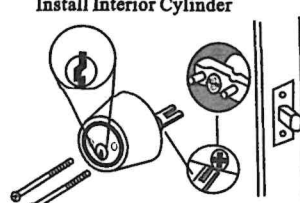

Insert (2) two screws through holes engaging holes in
 exterior cylinder and tighten.

INSTALLATION TEMPLATE

