

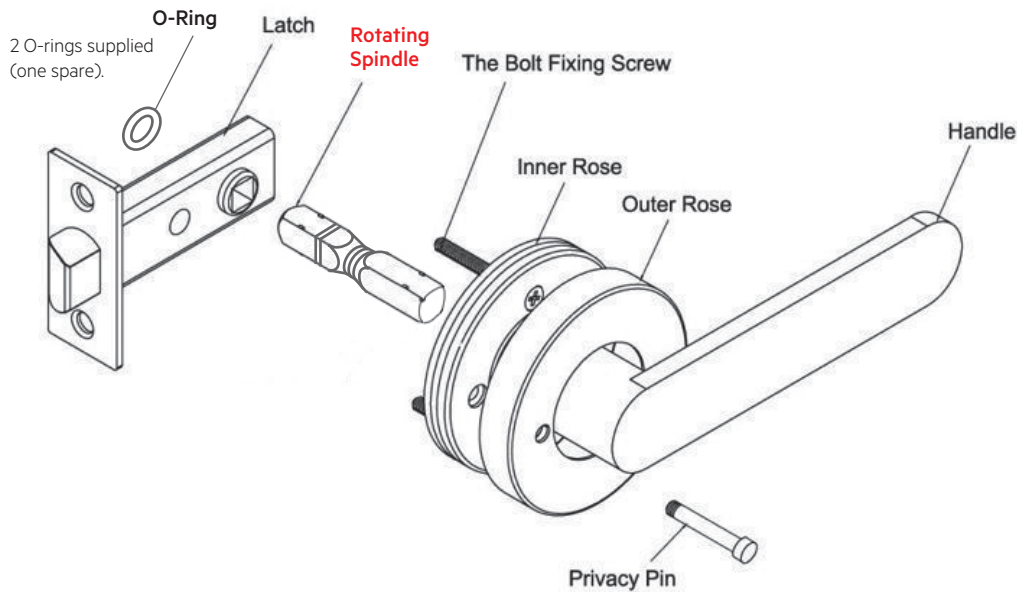


Milano Integrated Privacy Set Installation Instruction

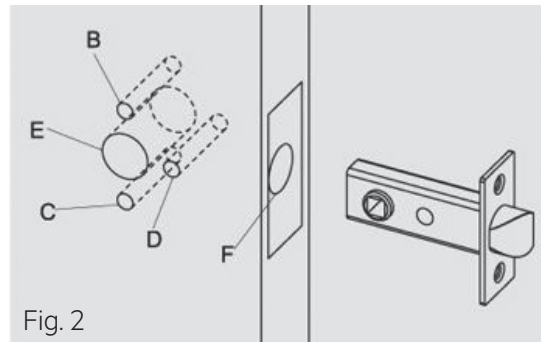


1. Using the template below, mark drilling centres into the door.
2. Drill holes A to F as indicated in figure 1 and figure 2 and the latch.
3. Insert rotating spindle into latch (as shown in diagram above).
4. Place O-ring into groove of spindle.
5. Insert and tighten 2x tie bolt screws, 2x wood screws, and 2x grub screws to secure the levers to the door.
6. Add outer rose and privacy pin.

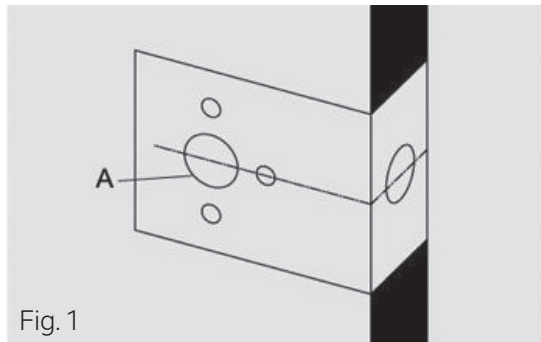

INSTALLATION TEMPLATE.

Important: double check dimensions if printing from an electronic version

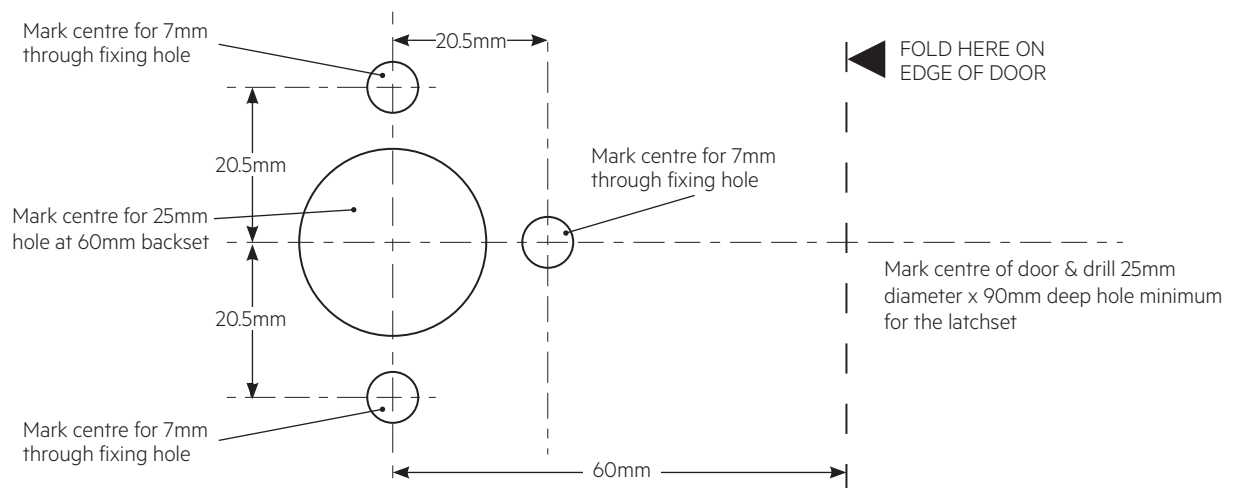

SEPT-2020