

NARROW STILE MORTICE LOCK

MNC

1. Select each side requirement : Lock or Unlock (EACH Side of LOCK)


Using a Small Flat Blade Screwdriver, Lightly Depress and Turn to select : Ensuring the Indicator Pin is Located in the Hole LOCK or UNLOCK.

(Unlock Position is used for Passage Function and Emergency Exit)

(Lock Position is used to Lock and Unlock the Handle)

2. If using the Thumbturn Adaptor : Using the Flat Blade Screwdriver Throw the **Lock Arm** Down to the Locked position (**Lock arm** is located inside the Oval Hole), Insert the Adaptor and Secure with the Retaining Pin

3. Rotate the **Latch Bolt** to the required closing side.

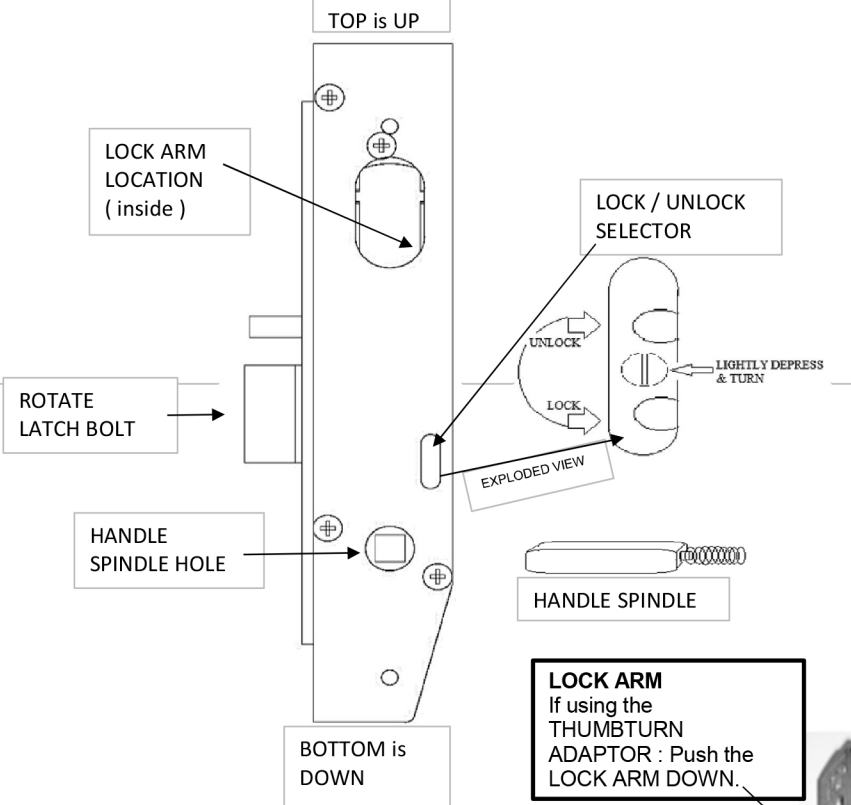

HANDLE ASSEMBLY

ROTATE THE LEVER HANDLE TO THE REQUIRED SIDE

ATTACH THE SPRING TO THE REAR OF THE SPINDLE

Spring End goes into the Handle

AFTER PUSHING the LOCK ARM DOWN INSERT the THUMBTURN ADAPTOR with the BUTTERFLY CAM RIGHT HAND DOWN as per PICTURE (LEFT HAND DOWN IF OPPOSITE SIDE)

LOCK CYLINDER

There are 3 Different **CAMS**, each has a specific task.

1. Lock / Unlock

2. Retract Latch

3. Used when Thumbturn is the Opposing Handle

1. Lock / Unlock is the Furniture with Cylinder Hole and Lever
2. Retract Latch is the Furniture with Cylinder Hole, No Lever
3. Thumbturn Cam is when the Opposing Furniture has a Thumbturn instead of a Cylinder Hole.

Note: The Furniture (Lever and Thumbturn Snib) will also require a Thumbturn Adaptor Fitted into the LOCK on the same side as the Thumbturn Furniture.

LOCK CYLINDER / THUMBTURN ADAPTOR RETAINING PIN

Cams attach to Rear of Key Lock Cylinder (Facing up as per Cam Photo)

Thumbturn Adaptor

BUTTERFLY CAM

Thumbturn Furniture

Thumbturn Furniture Tailpiece must be Cut so that it does not protrude on the other side of the Installed Thumbturn Adaptor

HANDY HINT: when FITTING THE ADAPTOR Slide the Bottom Side Butterfly Cam of the Adaptor in first